DESIGN BY IRIVER

E40
USER GUIDE

iriver

CONTENTS

01
Getting Started

Components 03
Locating the Controls 03
Power Management 05
Connecting the Product 06
Using iriver plus 4 08

02
Using E40

Home Screen 11
Music 11
Video 14
Picture 16
FM Radio 17
Recording 19
File Browser 20
Setting 21

03
Other Information

Important Safety Information 23
Troubleshooting 24
Copyrights 25
Certification 25
Registered Trademark 26
Exemption 26

Components

Components may be changed without prior notice for improvement of product performance or quality.

E40

Quick Start Guide
& Product Warranty

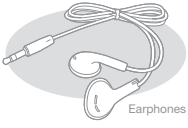

Earphones

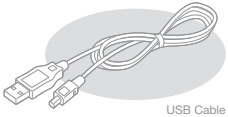

USB Cable

Earphones: Connect this to the device to output sound.
USB Cable: Connect device to the computer and recharges the battery.
Quick Start Guide: Explain how to use our device.
Product Warranty: Please keep this in a safe place for use during any warranty repairs.

Locating the Controls

The printed or engraved exterior, components, and contents may differ by model.

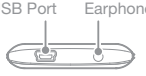

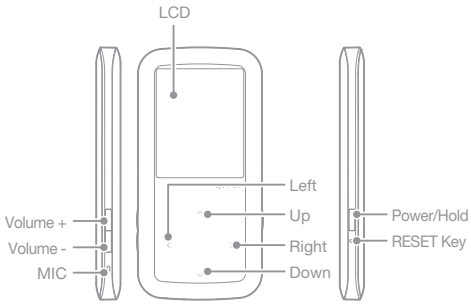

USB Port: Connect to the computer or charge the battery using this USB port.
Earphones Jack: Connect the earphone to output the sound.
Volume Key: Control the sound volume.
MIC: Record voice.
LCD: Display the screen.
UP: Menu – Moves up in the list.
While playback – Playback and Rewind of previous file
Listening to radio – Moves to the previous frequency / channel.
Down: Menu – Moves down in the list.
While playback – Playback and Fast Forward of next file
Listening to radio – Moves to the next frequency / channel.
Left – Move to upper menu / previous page.
Right - Confirm and execute the selected items.
Power / Hold: Turn on/off the power by sliding to the power and lock the device by sliding to the hold.
RESET Key: Reset the product.

Power Management

Power on/off

1. Press the [Power] until power comes on.
2. When the product is on, press and hold the [Power] until power goes off.

This model supports an automatic power-saving feature to minimize battery consumption. Depending on [Setting – Timer - Auto Power Off], the product will be automatically turned off when keys are not operated for a specified time. (Refer to page 21)

Using the Hold Function

1. Lock the device during use by pressing [Power].
2. Unlock the device by pressing [Power] again.

Using the Reset Function

1. If buttons will not work while the device is being used, press [RESET].

Current time and memory data are preserved during reset.
To avoid damaging the memory, do not use reset function while the device is playing.

Charging the Battery

1. Turn on your computer.
2. Connect the device to your computer. The internal battery will charge automatically.

To avoid malfunctions, only use the USB cable provided. Verify that the device is connected to a high-power USB 2.0 port. Some low-power USB ports built into certain peripheral devices, such as some types of keyboards and USB hubs without internal power, may not provide enough power to charge the device.
While the PC is switched to standby mode, the device may not be charged.
Turn the device off when charging. Leaving the device turned on during recharge may prevent “Charge Complete” from being displayed.
The battery will be fully charged within about 2 hours 30 minutes. (Based on fully discharged, power Off).
The charging time might be extended if you use the product while charging.

Charge and store the product at room temperature. Do not expose the device to extremes in temperature while recharging.
The rechargeable battery is a consumable and the available usage time of the charged battery becomes shorter over time.

Connecting the Product

Connecting Earphones

1. Connect the earphones to the earphone jack.

Connecting to Your Computer

1. Turn on the device and computer.
2. Connect the device to the computer using USB connection and display screen offers connection modes.
   - Power & Data: The connection between the device and the computer is established and you can start transferring data.
   - Power & Play: The device is currently being charged and a file is being played.
   - Power Only: The device is currently being charged.

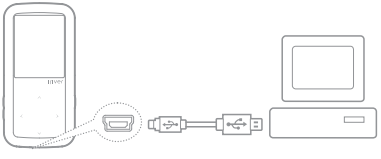

For successful computer and device connection, disable all functions.
Use ONLY the USB cable provided. Other cables may cause malfunction.
For successful computer/USB connection, disable all functions.
Check that the device is connected to a high-power USB 2.0 port. Connecting to a keyboard or a USB hub without a power supply of its own may result in malfunction.
File system only supports FAT32. Format this device into FAT32.

Disconnecting from your computer

1. Safely disconnect the device from your computer by clicking the icon on the taskbar of the computer screen.
2. Confirm the device disconnection by clicking [Confirm].

Depending on the operating system, for example Windows XP, the icon may be hidden from the taskbar. Hidden icons can be displayed by clicking the indicator.
Safe disconnection may not be performed if application programs such as Windows Explorer or Windows Media Player Windows are being used.
Make sure that the device is safely disconnected after all the active application programs are closed. If safe disconnection fails, retry later. Failure to safely disconnect may result in data loss.

Copying Files (Folders) to the Device

1. After selecting files/folders to copy from the computer, drag and drop the selected file/folder to the added drive.
2. Files (or folders) will be transferred to folders below according to their content type.
   - Music : Music - Video : Video - Picture : Pictures

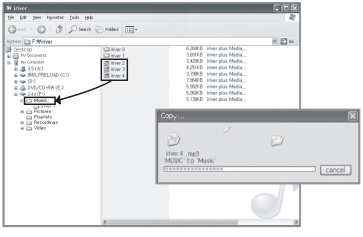

Please connect the USB cable properly.
If the power of the computer or device is turned off or the USB cable is disconnected while copying or moving files/folders, serious damage to the memory may result.
Transfer rate may differ depending on the computer or OS environment available for your region.
iriver plus 4 is recommended for saving music, video, text and document files.
When saving through a removable disk, rebuild Database in [Setting – Advance Settings - Rebuild Library]. (Refer to page 22)

Deleting Files (Folders) from the Device

1. Select the files/folders to be deleted, right-click on them and select [Delete].
2. Click [Yes] when the [Confirm File/Folder Deletion] window pops up, and the selected files/folders will be deleted.

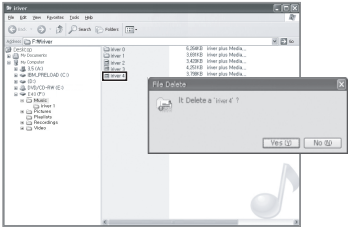

Using iriver plus 4

iriver plus 4 is integrated software that manages a variety of multimedia files. Use iriver plus 4 to transfer files between the computer and device and do automatic firmware upgrades.

Installation

1. After installing the iriver plus 4 software program, the installation guide screen will appear.
2. Follow the step-by-step instructions on the screen to complete the installation process.

Please download the iriver plus 4 software program from the iriver website (www.iriver.com).
Minimum computer specifications are:
Windows® XP
- Intel® Pentium® II 233MHz or above
- Memory: 64MB or above
- 30MB or more free space
- 16bit Sound Card and Speaker
- Microsoft Internet Explorer V 6.0 or above
- SVGA or high-resolution monitor (min 1024x768 resolution)

Windows® Vista Specifications
(For Windows® Vista, note that only the 32-bit version will be supported.)
- Intel® Pentium® II 800MHz or above
- Memory: 512MB or above
- 20MB or more free space
- 16 bit Sound Card and Speaker
- Microsoft Internet Explorer V 6.0 or above
- SVGA or high-resolution monitor (min. 1024x768 resolution)

Windows® 7 Specifications (For Windows® 7, note that only 32-bit version will be supported.)
- 1GHz or above, 32-bit processor
- Memory: 1GB or above
- 16GB or more free space
- DirectX 9 Graphic Device with WDDM 1.0 higher Drive
- SVGA or high-resolution monitor (min. 1024x768 resolution)
- Maximum file size for transfer: 4GB.

Adding Media to the Library

1. When iriver plus 4 is first run, the Add Media Wizard will be executed.
2. Follow the screen instructions to add library media files such as music, videos and pictures stored in the computer.

Extracting Media from a CD

1. Insert a music CD into the CD drive and execute iriver plus 4.
2. Select the desired music checkboxes to extract from [CD] tab in iriver plus 4 and click [CD Ripping] at the bottom left.
3. When the music extraction is complete and [All Music] is selected, the extracted music files have been added to the library.

Transferring Media to the Device

1. Connect the device to the computer's USB port and then execute iriver plus 4.

2. Select the desired file checkboxes to transfer from the computer to the deviceand then click [Transfer] or drag & drop the file to the Device icon at the bottom or Device window.
   File transfer status is displayed in the [File Transfer] tab.
3. When the file transfer is complete, the selected music files have been added to the device library.

Initializing the Disc

1. Connect the device to the computer's USB port and then execute iriver plus 4.
2. Select [Device > Initialize Disc]. When the window pops up asking whether to proceed with initializing the disc, click [Start].
3. When the initialization process is finished, the Complete window will be displayed and the device can be disconnected from the computer.

! File recovery is not possible once files have been deleted from the device. Backup all data BEFORE initializing the disc.

Upgrading the Firmware

1. Connect the device to an online computer's USB port and then execute iriver plus 4.
2. Select [Device > Firmware Upgrade], and the Upgrade window will be displayed. Complete the firmware upgrade by following the instruction window.

! Insufficient battery power may prevent initiation of firmware upgrade.
Never disconnect the device from the computer while downloading a firmware upgrade file.
After the download is completed, the upgrade will be initiated when the device is disconnected from the computer.
A pop-up window will display the version of firmware installed.
When newer firmware versions are available, a notification window will be displayed when the device is connected to the computer.

Home Screen

Home Screen Legend

: Battery status
Music: Play music. (Pages 11~13)
Video: Display video files. (Pages 14~15)
Picture: Display pictures. (Page 16)
FM RADIO: Listen to or record FM radio. (Pages 17~18)
Recording: Record voice. (Pages 19~20)
File Browser: Check files stored in the device and Micro SD card. (Page 20)
Settings: Set user environment. (Pages 21~22)

Selecting Options

1. Turn on power to display the home screen. Press and hold the [ ] while using the device to display the home screen.
2. Press the [/] to select the desired mode and press [ ] to play that mode.

Using Recording Function in Home Screen

1. In the home screen, press and hold [ ] to display the screen for recording. Shortly recording starts.
2. Press [ ] during recording to stop and the recorded file will be saved.
3. Press and hold [ ] to display the home screen.

Music

Selecting Music

1. Select [Music] on the home screen to display the music list.
2. Press [/ / /] in the music list to select the desired music, and press [ ] to play the selected music.

: Move to the upper list/folder.

: Move to the sub menu/folder. Play when selecting files.

/ : Move within the list.

In [Dir List], music can be searched by folder.
Press and hold the [ ] in the [Bookmark List] to delete the bookmark.
In the [Music] mode, only music files located in the Music folder will be displayed.
To search and play music files in any other folders, use the [File Browser] mode.
Continuous Playback Time: approx.51 hours (based on MP3, 128Kbps, 44.1KHz, Volume 20, EQ Normal, LCD OFF, earphones).
Supported file formats: MP3 (8~320Kbps), WMA (8~320Kbps), APE, FLAC, and WAV
Playlists can be managed using iriver plus 4.

Playing Music

- Press the [Volume + / -] to control volume.
- While playing, press the [ ] to pause/resume.
- While playing, press the [/] to play the previous/next music.
- Press and hold [/] while music is being played to rewind/fast forward the file.

LCD Display for Playing Music

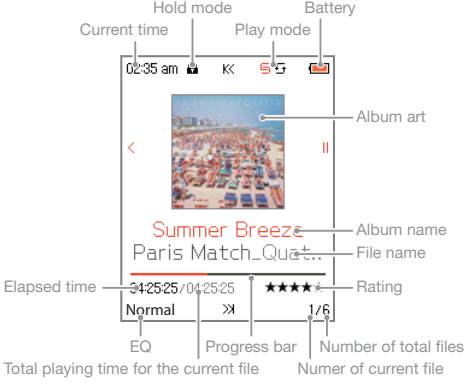

Additional Features

1. The list of additional features are displayed when pressing and holding [⁘] while a file is being played.
2. Press [⋰ / ⋱] to select the additional feature and press [⁘] to display the window for setting it up.
   ⋰ : Move to the upper list.
3. Press [⋰ / ⋱] to set the feature up and press [⁘] to save / operate it.
   - AB Repeat: Implement AB Repeat.
     Select [AB Repeat] and press [⁘] to select the point A and display the playing screen. Press [⁘] again to select the point B. Now the player plays between point A and B repeatedly. While playing AB Repeat, press [⁘] again to deactivate the repeat playback. If you customize [Repeat Frequency] and [Repeat Interval], AB Repeat will be implemented according to a selected frquequency and interval.
   - Play Mode: Set the play mode during playback.
   - Study Mode: Set a time interval by pressing [⋰ / ⋱] during playback. (When the power is off, the Study Mode is deactivated.)
   - Add Bookmark: Add the location of a song being played to the bookmarks list.
   - Select EQ: Set the EQ during playback.
   - Set Sound: Set the sound related items.
     + User EQ: Set according to user preference.
     + SRS WOW HD: Set stereophonic sound effects.
       (WOW HD™ improves sound quality by delivering a stronger bass and clearer high frequency range, and conveying the entertainment experience through dynamic 3D sound effects.)
       - SRS: Set virtual three-dimensional sound effect.
       - TruBass: Set bass.
       - FOCUS: Set the sound clarity level.
       - WOW : Set amplification value according to the characteristics of the earphone being used.
       - Definition: Restore missing sound to the level of original sound.
     + Fade In: Make an audio signal increase gradually when playing music.
   - Rate: Set the rate of the selected music.
   - Scan Speed: Set the speed for searching songs for playback
   - Lyric Display: Select whether to display the lyrics on the screen
   - Repeat Frequency: Set the repeat frequency.
   - Repeat Interval: Set the repeat interval.
   - Delete Files: Delete the selected file.
   - Information: Display information for the selected file.

Video

Selecting Video

1. In the home menu, select the [Video] to display the video scan list.
2. In the video list, press the [⋰ / ⋱ / ⋖ / ⋗] to select the video and press [⋗] to play the selected video.
   - ⋖ : Move to the upper list/foler.
   - ⋗ : Move to the sub list/folder. Play selected file.
   - ⋰ / ⋱ : Move within the list.

! While playing video, the picture orientation and key directions are inverted by screen orientation
In [Dir List], browse video by folder.
In the [Video] mode, only video files in the Video folder are displayed. To play other video files in any other folder, use the [File Browser] mode.
Continuous Playing Time: approx. 5 hours - Video: JPEG, 220x176@30fps, approx. 500Kbps / Audio: ADPCM, 44Khz, 128Kbps (LCD Lightness - Medium, Volume 20)
Playing time may vary with image type.
Supported file formats: SMV
Caption files (.smi) allow encoding together with video file using iriver plus 4.
(Be sure to match both names of video and caption files.)
Be sure to use iriver plus 4 when transferring video files. Otherwise, unexpected errors may occur during video playback.
- Playback for this file is not allowed / - The sound is not synchronized with the screen / - Playback is choppy

Playing Videos

- Press [Volume +/-] to control the volume.
- While playing, press [⋗] to pause / resume.
- While playing, press [⋰ / ⋱] to play previous/next file.
- While playing, press and hold [⋰ / ⋱] to fast reverse or fast forward.

LCD Display for Playing Videos

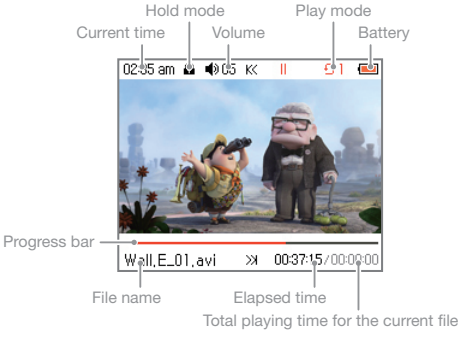

Additional Features

1. While playing, press and hold [⁛] to display the list of additional features.
2. Press [∴ / ⋱] to select the additional feature and press [⁛] to display the window for setting it up.
   ⁘ : Move to the upper list.
3. Press [∴ / ⋱] to set the feature up and press [⁛] to save / operate it.
   - Play Mode: Set the repeat playback mode of video file.
   - Resume: Select whether video is resumed from the last played point or from the beginning.
   - Play Next File: Select whether the next file will be played when the name of file is in sequential order.
   - Information: Display information for the selected file.

Picture

Selecting Pictures

1. In the home screen, select [Picture] to display picture scan list.
2. In the list, press the [⋰ / ⋱ / ⋖ / ⋗] to select the picture and press [⋗] to play it with full screen.
   ⋖ : Move to upper list/folder.
   ⋗ : Move to the sub list/folder. Display the picture in full screen.
   ⋰ / ⋱: Move within the list.

! In the [Picture] mode, only picture files located in the Picture folder will be displayed.
To search and play picture files in any other folders, use the [File Broswer] mode.
Supported file formats: JPG & BMP
(Some file types may not be fully compatible.)
Use iriver plus 4 when transferring image files to avoid errors during image playback.

Viewing Pictures

- While viewing pictures, press [⋗] to start /stop slide show.
- While viewing pictures, press [⋰ / ⋱] to play the previous / next picture.

Additional Features

1. While viewing pictures, press and hold [⋗] to display additional features.
2. Press [⋰ / ⋱] to select the additional feature and press [⋗] to display the window for setting it up.
   ⋖ : Move to the upper list.
3. Press [⋰ / ⋱] to set up the feature and press [⋗] to save / operate it.
   - Slide Time: Set the time each image is displayed in the slide show.
   - Rotation: Set the direction of rotation.
   - Information: Display the properties of the selected picture.

! While playing the slide show, additional features will not be displayed.

FM Radio

Executing FM Radio

1. When selecting [FM Radio] in the home screen, the last-selected radio frequency will be received.
2. Select a new radio frequency by pressing [⋰ / ⋱].

> **!** While listening to the radio, the earphones serve as its antenna. Connect and use only the supplied earphones for best reception.

Listening to FM Radio

- Control the volume while listening by pressing [Volume + / -].
- Set the preset on or off by pressing [⁘] while listening.
- Move to a higher or lower frequency by unselecting the preset and pressing [⋰ / ⋱].
- Scan for receivable frequencies by unselecting the preset and pressing and holding [⋰ / ⋱].
- Move to a higher or lower preset channel by selecting the preset and pressing [⋰ / ⋱].

LCD Display for FM Radio

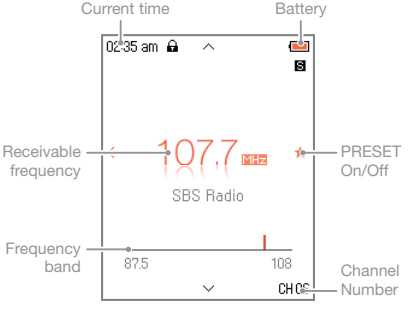

Additional Features

1. The list of additional features are displayed when pressing and holding [⋱] while listening.
2. Press [⋰ / ⋱] to select the additional feature and press [⋱] to display the window for setting it up.
   ⋰: Move to the upper list
3. Press [⋰ / ⋱] to set up the feature and press [⋱] to save / operate it.
   - Recording: Record the radio broadcast while listening.
     + Press [⋱] to begin recording; press the same button once more to stop recording. Recorded file is saved.
   - Timer recording: Record radio broadcast at a specific time. Set up the use of timer recording, channel, starting time, recording time and recording interval.
   - FM Recording List: Display the list of FM recording. Press [⋰ / ⋱] to select files and press [⋱] to play the selected file.
   - Saving/Deleting Channel: Save the frequency currently being received to a channel.
   - Frequency Auto Store: Scan the frequency signals that are receivable and automatically save them to channels.
     + Up to 20 channels can be saved.
   - Channel List: Display the list of the channels saved.
   - Radio Regional Settings: Set broadcasting frequencies and steps depending on the region.
     Korea/US: 87.5~108.0MHz / Japan: 76.0~108.0MHz / Europe: 87.50~108.00MHz

Volume cannot be changed while recording.
Recording will be automatically stopped when the available memory or power is insufficient.
The recorded file will be saved in the FM recording list in the following format. TUNERYYMMDDXXX.WAV (YY: year, MM: month, DD: day, XXX: Sequential number)
Maximum recording time is 3 hours.

RECORDING

Recording

1. In the home screen, select [Recording] to display the standby window for recording.
2. Start recording by pressing [⁘].
3. Press the [⁘] to stop recording and the recorded file will be saved.

Volume cannot be changed while recording.
Recording will be automatically stopped when the available memory or power is insufficient.
Recorded files are saved in the list of recordings in the following format.
VOICEYMMDDXXX.WAV (YY: year, MM: month, DD: day, XXX: Sequential number)
The size for recorded files per minute according to recording quality is as below.
Low: approx. 720K / Medium: approx. 960K / High: approx. 1.4M
Maximum recording time is 3 hours.

LCD Display for Recording

Additional Features

1. Press and hold [⋱] in the recording standby window to display the list of additioanl features.
2. Press [⋰ / ⋱] to select the additional feature and press [⋱] to display the window for setting it up.
   ⋰ : Move to the upper list
3. Press [⋰ / ⋱] to set up the feature and press [⋱] to save / operate it.
   - Recording List: Display the recording list.
     Press [⋰ / ⋱] to select the file and press [⋱] to play the selected file.
   - Recording Quality: Set the quality of recorded voice.
   - Voice Auto-sensing: Set up to record only when the voice is detected.

File Browser

Execute and manage a variety of files stored in the device.

Selecting Files

1. In the home screen, select [File Browser] to display the file list.
2. In the list, press [⋰ / ⋱ / ⋰ / ⋱] to select the file and press [⋱] to play it.
   ⋰ : Move to upper folder.
   ⋱ : Move to the sub folder. Play when selecting the file.
   ⋰ / ⋱: Move within folder.

! To browse and play music files in folders other than the Music folder, use the [File Bowser] mode.
To browse and play video files in folders other than the Video folder, use the [File Bowser] mode.
To browse and play picture files in folders other than the Picture folder, use the [File Bowser] mode.

Deleting Files

1. In the file list screen, select the file and press and hold [⋱] to display the confirmation message.
2. Select [Yes] using [⋰ / ⋱] and press [⋱] to delete the selected file.

Setting

Set up the desired user environment. The pre-installed menu structure may differ depending on the firmware version.

Settings

1. Select [Settings] on the home screen.
2. Select desired items by clicking [⋰ / ⋱] and pressing [⁝] to see the setup list.
3. Select additional features by pressing [⋰ / ⋱] and then press [⁝] to display the function settings window.
4. Set the function by pressing [⋰ / ⋱] and then press [⁝] to save it.

Current Time Settings

- Set the current time.
  - ⋰ ⋱ : Set the menu. - ⁝ : Move within the list.

Screen Settings

- Backlight: Set the time backlight is on.
- Brightness: Set the screen brightness.
- Theme: Set the display theme.

Timer Settings

- Auto Off Timer Settings: Power will be automatically turned off when there is no user activity for a preset time.
- Sleep Setting: Power will be automatically turned off when the preset time is reached.

Advanced Settings

- Rebuild DB: Rebuild database of files.
- Format: Delete all the data in memory.
- System Information: Display the device system information
- Reset All Settings: Restore to the fractory default settings.

Backup all valuable files before formatting. Deleted files cannot be recovered. (Format the memory using E40.)
Check the available battery power before starting to reformat.

Setting Languages

- Menu Language: Select language for menu.
- Countries: Select language for tag.

Important safety information

Relating to the Product

- Leaving the same screen turned on for an extended period may result in an after-image on the screen.
- Do not allow metal (coins, hairpins, etc.) or foreign substances that burn easily to get inside the product.
- Do not place heavy objects on top of the product.
- If the product gets wet from rain, drinks, medicines, cosmetics, sweat, or moisture, do not turn the power on, and after quickly wiping the product with a dry cloth, go to the closest iriver service center and get it checked. (Failure due to submersion will be charged regardless of the warranty period, and repair may be impossible.)
- Do not expose device to moisture, dust, or soot.
- Do not disassemble, repair, or modify this device.
- Do not expose device to direct sunlight or extreme temperature (-5℃ ~ 40℃).
- Do not expose device to magnets, TVs, monitors, speakers, or other objects with strong magnetism.
- Do not use chemicals or cleaners on the product; they may degrade the surface and cause damage to the finish.
- Do not drop the product, or subject it to strong impact or vibration.
- Do not press multiple keys simultaneously.
- Do not disconnect from USB cable when transmitting data.
- When connecting the product to a computer, use a USB port on the back of the computer. Some generic computers with sub-standard USB ports can damage the product.
- Do not insert devices other than earphones in the earphone terminals.
- Application of a defective film may worsen touch sensitivity and darken the screen.

Others

- Do not use or handle headphones/earphones when driving a bicycle, car, or motorcycle.
  It is not only dangerous but can also be illegal according to the region.
- Do not use when driving, walking, or climbing.
- Use this device only in hazard-free areas.
- When using while on the move, check if there are any dangerous obstacles.
- There is a risk of electric shock during electrical storms. Avoid use if possible.

- If tinnitus (ringing in the ears) occurs, reduce the volume or discontinue use.
- Do not use at high volume for extended periods.
- Do not use headphones/earphones at high volume.
- Do not allow headphones/earphones to become entangled with other objects while in use.
- Do not sleep with earphones on or use them for extended periods.

Trouble shooting

Check!

+ The power does not come on.
  - Check available power in the battery.
    Check after charging with USB cable.
  - Press the reset key using a pointed tool.
+ The battery does not charge even when the USB cable is connected.
  - Check that the USB cable is properly connected.
+ There is an error on the computer when connecting the USB.
  - Check that the device is properly connected to the USB cable.
+ The capacity changes after formatting.
  - Slight changes in capacity may occur according to the OS of the computer being used.
+ The screen turned off without warning.
  - To save power consumption and to lengthen the audio file replay time, the device is designed to turn off after a specific period of inactivity. Adjust the length of time before turnoff in [Setting – Display – Backlight].
+ The screen is not normal.
  - Check for foreign substances on the screen.
+ There is poor FM radio reception and static.
  - Check for foreign substances in the earphone terminals.
  - Check that the earphones are connected properly.
  (When listening to FM radio, earphones serve as the antenna.)
  - Adjust the position of the player and earphones.
  - Turn off any nearby electronic equipment to avoid potential interference.
+ There is no sound or there is too much noise.
  - Check that the volume is set to '0'.
  - Check that the earphones are connected properly or for foreign substances in the terminal.
  - Check for any errors in the music file.

+ The device is not connected to my computer.
  - Please connect the device to the USB port located on the backside of the computer.
    Sometimes, power voltage of USB ports may be different.
+ Files are not replayed or some file images are blurry.
  - Depending on the file type or image quality, the following problems may occur:
    - It is difficult or impossible to replay the file.
    - The device may malfunction due to a problem with the file.
    - The images on the device's screen may be displayed differently from those on the computer.
    - There may be performance differences between the device and the computer such as playback speed.
    - There may be differences in specifications.
  - Retry after converting the file to an appropriate format or use a different file.

Copyrights

iriver Ltd. owns the patent rights, trademark, copyright, and other intellectual property relating to this manual. Thus, none of the contents of this manual can be copied or reproduced in any form or by any method without the consent of iriver Ltd. Using any part or all of the document may result in legal sanctions. Software, sound sources, videos, and other content with copyrights are protected under the related provisions of copyright regulations, etc. Users will be held legally responsible for any copying or distributing of contents with copyrights without permission.
The companies, organizations, devices, people, or events cited in the examples are for demonstration purposes only and do not represent actual persons or situations.
Our company has no intention to imply a relationship with any company, organization, device, person or event through this manual, and none should be inferred.
It is the user's responsibility to observe the relevant copyright regulations.
©1999~2011 iriver Limited. All rights reserved.

Certification

KC / FCC / CE / CCC
Grade B device (home broadcasting and communication device) is mainly for domestic use (grade B), and can be used in all areas.

Registered Trademark

Windows 2000, Windows XP, Windows Vista, Windows 7, Windows Media Player are trademarks of Microsoft Corp.
srs WOW HD is a trademark of SRS Labs, Inc.
WOW HD technology is incorporated under license from SRS Labs, Inc.

Exemption

The manufacturer, importer, and agencies will not be held liable for damage caused by accidents including injuries or inappropriate use or handling of the product. The information in the manual is based on the current specifications of the product.
iriver Ltd., the manufacturer of this product, continues to add new features and apply new technologies to it. All standards may be changed without prior notice to individual users.
We cannot be held responsible for data loss caused by the use of the product.